

INSTRUCTIONS FOR USE AND MAINTENANCE

Interior fabric shading

BASIC INFORMATION

This Manual is intended for all users of the cloth blinds made by Servis Climax. Please read the Manual carefully before using the product for the first time and keep the Manual for the entire duration of product use.

4-year warranty is given for all the products of SERVIS CLIMAX a.s.

Manufacturer: SERVIS CLIMAX a.s., Jasenice 1253, 755 01 Vsetín, CIN: 25352628



This symbol draws attention to a potential hazard or important information.

IMPORTANT INFORMATION

1. Use the cloth blind only when no articles or persons are present in the cloth travel path when the blind is pulled down or up.
2. Do not operate the cloth blinds by pulling them at the bottom profile – brake damage may occur (except roller blinds into skylights).
3. Avoid hanging any articles on the product.
4. If small children are present please pay special attention – there is a risk of strangulation even if the blind is made in compliance with ČSN EN 13120+A1 and fitted with safety elements.
5. Move beds, child cot beds and furniture away from the window fitted with chains.
 6. To avoid involution or strangulation, place them out of the reach of children.
-  7. Cords and chains may wind round the child's throat.
8. There is a risk of electrical shock with the motorised blinds. Never interfere with their wiring.
9. Work with components associated with electric power must be performed by an experienced person who has the required certificates for this work!
10. Before inspection or maintenance of the electrical parts the product must be reliably disconnected from the power supply.
11. Do not allow children to play with the control device. Keep the remote control out of reach of children.
12. If repair or service intervention is necessary, always contact the company that installed the product or the manufacturer. In such situation the blind must not be used any longer.

OPERATION – BASIC INFORMATION

1. The roller blind can be operated either by a chain (a), crank (b) or electric motor (c).
- 1.a. The cloth blind is moved up or down by pulling one chain strand. The chain is usually fitted with adjustable stops when installing. The stops serve for setting the end positions. In case of use in areas where small children are present or in case of the Zebra roller blind type, the chain can be endless. For this operation, no end positions are set so you must care not to overturn the roller blind when being retracted, and also not to exceed the ordering height when being pulled out (there is a risk of release of the fabric from the shaft). The blinds are fitted with a brake that allows their stopping in any position without the need to lock the chain.
- 1.b. The roller blind can also be pulled out and retracted using the crank. Turning the crank in one or the other direction causes the roller blind to move up or down. For this operation there are no end positions set so you must care not to overturn the roller blind when being retracted, and also not to exceed the ordering height when being pulled out (there is a risk of release of the fabric from the shaft).

- 1.c. The cloth blinds can be retracted and wound using the remote control or a switch with electric drive. Electrical installation, assembly and maintenance must be carried out exclusively by qualified personnel authorised and competent to perform such tasks. When setting the cloth blind control system please follow the manual supplied for the equipment by its manufacturer.
2. When using it, handle the product with care.

MAINTENANCE

1. The product needs no extraordinary maintenance and lubrication of the control mechanisms.
2. Treat a cloth contaminated by, for example, dust by using a soft brush, such as a brush used for clothes.
3. It is always convenient to vacuum clean the cloth using the vacuum cleaner set to the lowest performance.
4. Only for the selected fabrics – according to the sample collection(, the sample collection can be seen at www.climax.cz):
5. Should you intend to perform wet cleaning, place the cloth (blind) on a smooth and clean surface.
6. Use soap solutions without any chemical additives only with a maximum temperature of 30°C. The rag should be damp, not wet.
7. Clean the cloth by pulling the rag from edge to edge on both sides.



8. Avoid using any aggressive cleaning agents as organic thinners, solvents, cleaning sands, cleaning pastes, steam generators, strong alkaline cleaning agents, etc.
9. Clean the shading lamellas or textile materials carefully to avoid their deformation or other damage.
10. The cloths with a vapour plated aluminium layer must not be cleaned with water – this would damage the layer.
11. When cleaning, put the product in a position that will prevent its damage without impeding the cleaning process.
12. Protect the product from contamination resulting from construction work and painting.
13. Avoid ironing the cloths to avoid surface impregnation.

SERVIS CLIMAX a.s., Jasenice 1253, Vsetín, 75501, CZ