

OPERATION AND MAINTENANCE INSTRUCTIONS

INSECT SCREENS

GENERAL INFORMATION

This manual is intended for all users of the Servis Climax insect screens. Read the instructions carefully before using the product for the first time and keep them for the entire time you use the product. For all products of SERVIS CLIMAX a.s. a 4-year warrantee is provided. Manufacturer: SERVIS CLIMAX a.s., Jasenice 1253, 755 01 Vsetín, company registration no.: 25352628
Thank you for purchasing SERVIS CLIMAX products.



This symbol indicates a potential danger, or important information.



For disposal of packaging material and the product itself, or its electronic components, use the method and collection points designated for that purpose.

IMPORTANT INFORMATION

- 1) Use moving insect screens (door, sliding, roll-up window, roll-up door, pleated) only when there are no objects or people in the path of the screen.
- 2) Do not operate moving insect screens by pulling the mesh or by pushing into the mesh.
- 3) Do not hang or lean any objects on the products.



4) From a safety point of view, the products do not serve as a barrier against falling out of a window or door.

- 5) Avoid mechanical stress and damage to the product.
- 6) In case of necessity of repair or service intervention, it is always necessary to contact your sales representative or the installation company that performed the installation. In this case, the insect screens may no longer be used.

OPERATION

7) Always use the element designed for operation.

Door insect screens

- by pushing or pulling the handle, or the central crossbar with a groove

Sliding insect screens

- by pushing or pulling on a vertical profile with a groove

Roll-up window insect screens

- Rolo click and Rolo F1 – by pulling the cord, click with help of the lower profile

- Rolo hook – by pulling using the lower profile

Roll-up door magnet insect screens

- by pulling the vertical travelling profile with the magnet

Pleated insect screens

- by pulling the vertical travelling profile

8) Open the door nets using reasonable force to avoid damaging the hinges. This especially applies to the Ultra door nets, where the opening angle should not exceed 110°.

9) When operating the roll-up window insect screen in the up and down direction, it is necessary to keep the lower travelling profile in a horizontal position. Failure to do so may result in malfunction or damage to the screen. In the case of roll-up door screen, it is necessary to keep the travelling profile in a vertical position

10) Handle the product with care during use, especially when cleaning.

MAINTENANCE

11) The product does not require special maintenance and lubrication of control mechanisms.

12) When cleaning the mesh, use a gentle brush or a hand-held vacuum cleaner set to low power to prevent the mesh being torn or pulled out of the groove on the frame.

13) Roll-up insect screens require the guide rails to be kept clean.

14) Pleated insect screens require the rails to be kept clean. Any ingress of impurities, especially animal hair, leaves, dust and dirt, must be removed regularly. These impurities reduce the life span of the pleated shading and may lead to product damage. The screen may also be damaged by extreme weather conditions. Retract the screen in case of strong wind, risk of hail, etc.

15) Use only soap solutions without chemical additives, of a temperature up to 30°C.



16) Do not use aggressive cleaning agents such as organic thinners, solvents, cleaning sands, cleaning pastes, steam generators and strong alkaline cleaning agents.



17) When cleaning the windows, remove the product from the window, moving screens set in a such a position that the screen cannot be damaged and does not impede cleaning.



18) Protect the product from damage and contamination during construction work and decorating.

SERVIS CLIMAX a.s., Jasenice 1253, Vsetín, 75501, CZ